


Basic Program Operation

This section provides description on basic GDS Industry program operation.

Introduction of Main Screen

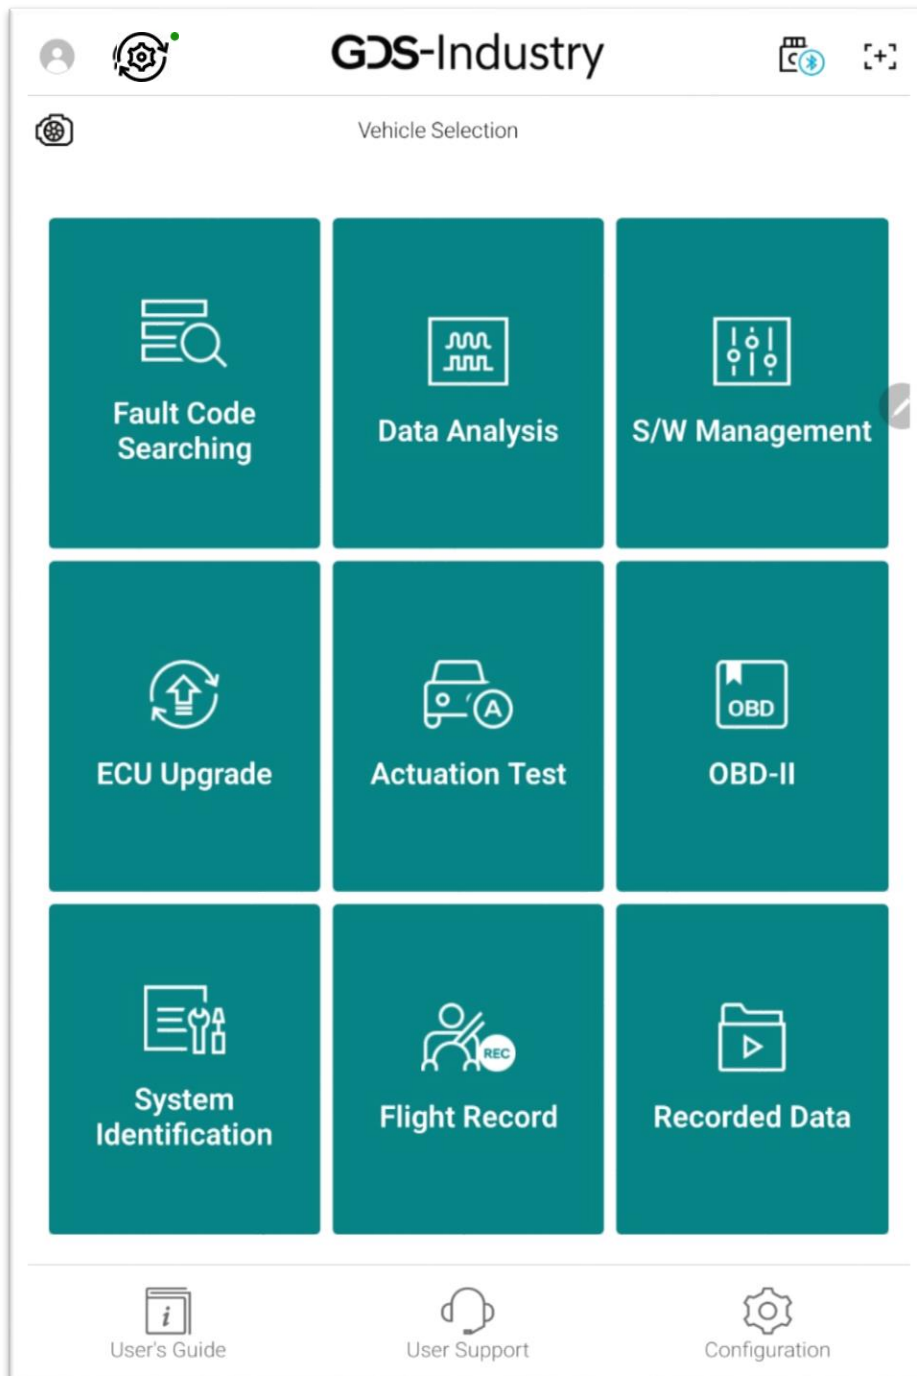



Top Menu



1 Log-in

To use GDS Industry, you may need to log-in through GSW account. If you don't log-in, it may restrict some of the functions.

	Log-out status
	Log-in status * You can edit your profile. (Configuration -> User Profile)

Update authentication





If you want to check the latest SW update, please use it after verifying the update.

Tablet Serial Save Keep update authentication

- You can apply Save ID and Maintain Log-in Status (7 days) options.
- If you lose your account, you can search your account through GSW link.

2 Internet Update







You can update the latest information on GDS Industry through Internet Update function (Internet Update is supported in online environment).

	Latest GDS Industry version status
	Downloading the data to be updated from the server
	Notification on a new update
	Failed to connect to the server

3 Module Connection Status Indication

This indicates wire/wireless connection status of tablet PC and communication module.

Module connection can be proceeded from Setting/Device Manager item.

	VCI II module is not connected.
	Searching VCI II module.
	VCI II ↔ Tablet is directly connected to wi-fi.
	VCI II ↔ Tablet is connected to a Bluetooth.
	VCI II ↔ Tablet is connected to a USB.
	GDS VCI ↔ Tablet is connected to a USB.


4 Capture Screen

You can capture the current screen of GDS Industry , and save it as an image file.




Save it as an image file by touching the capture button.

The captured data is saved in the path of NvciData/Record/

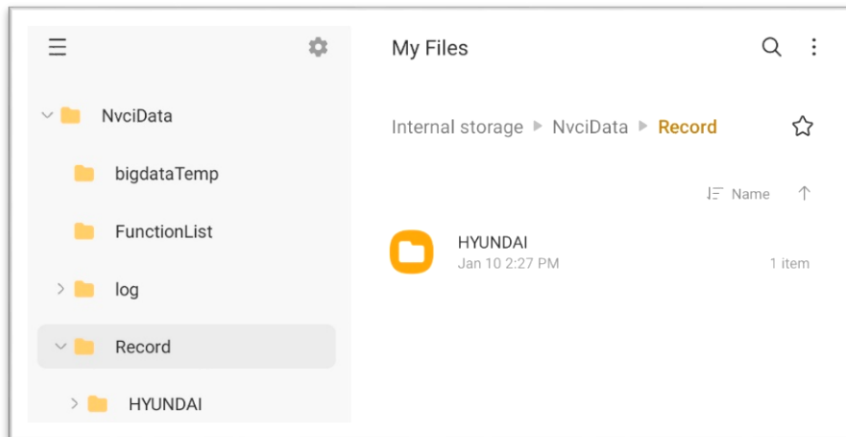


Vehicle Type Selection

GDS Industry is configured to allow access to diagnosis and information on the selected vehicle type.

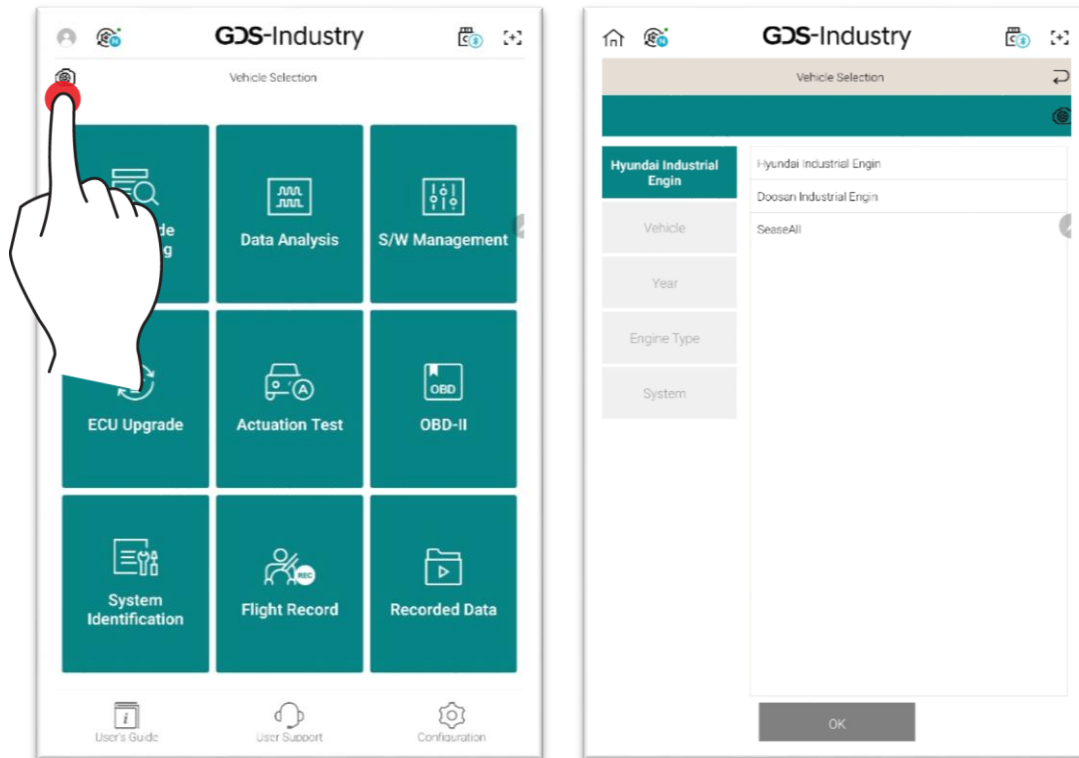

	<p>Select a vehicle type by reading VIN of the vehicle automatically (Auto VIN) * This requires diagnosis module connection.</p>
	<p>Select a vehicle type through the entered search word or entering a 6-digit VIN.</p>
	<p>Indicate the previously selected vehicle types as a list.</p>
	<p>Select a vehicle type by capturing the barcode of the vehicle.</p>

Bottom Menu

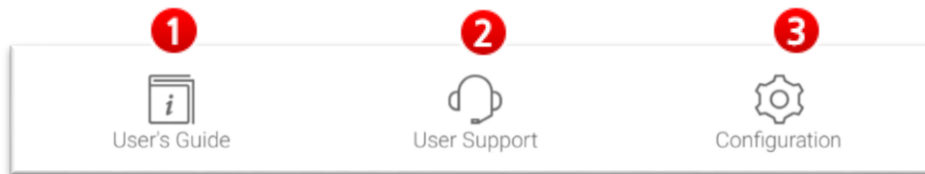

1 User's Guide

Technical communication documentation to provide assistance to people using the system.

2 User Support

This allows connection to FAQ website provided by GIT. In addition, 'Frequently Asked Questions' menu can provide the user with guidance on the use of GDS Industry or software.

3 Configuration

You can check and change the environment configured in GDS Industry.

Version Information	You can check GDS Industry version.
Device Manager	You can check the connection status with the communication module, and proceed firmware update.
User Profile	You can configure the logged in user profile.
Auto VIN	You can switch Auto VIN function to ON/OFF.
Diagnosis No.	You can configure the setting for issuing the diagnosis no.
Server	You can check GSW and update server URL.
Unit	You can configure the data unit.
Language	You can configure language to be used.