


Newest ECU Upgrade Event and downloading _Europe/General

When the user starts ECU Upgrade function, the newest ECU upgrade event of the selected vehicle is downloaded and updated automatically if Internet connection is on and the event is available.

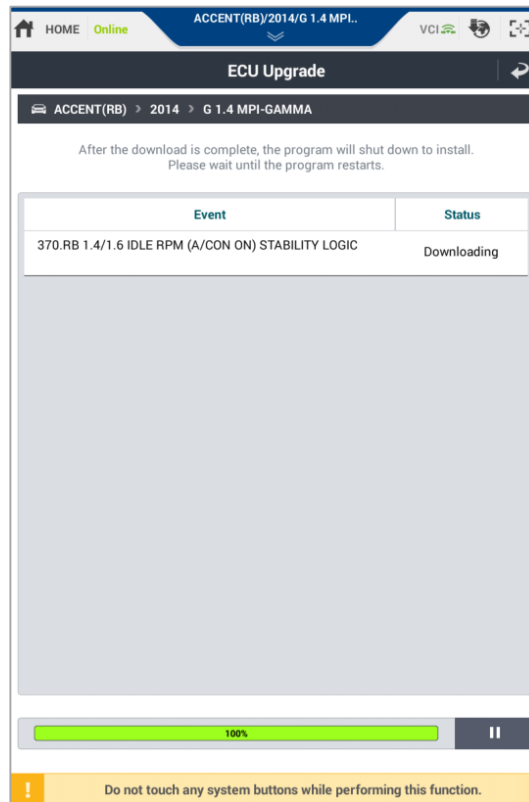

! *Caution*

- ☞ Do not run engine or turn off the ignition off during ECU upgrade.
- ☞ Check the status of battery before ECU upgrade. It should be fully charged.
- ☞ Check if the system is selected correctly during Manual Mode.
- ☞ Check the maintenance information or campaign of the vehicle before ECU upgrade.
- ☞ Check the cable or adaptor used with the vehicle before ECU upgrade.
(Each vehicle can be connected with a different adapter.)
- ☞ Replace the new part and then perform ECU upgrade when the part is required to be replaced.
- ☞ Check the ROM ID after ECU upgrade.