



Tool Box – Fault Code Searching

It searches fault code(s) of one or multiple number of systems mounted on the vehicle. The users can check detailed information related to fault codes that are searched, as well as maintenance information.

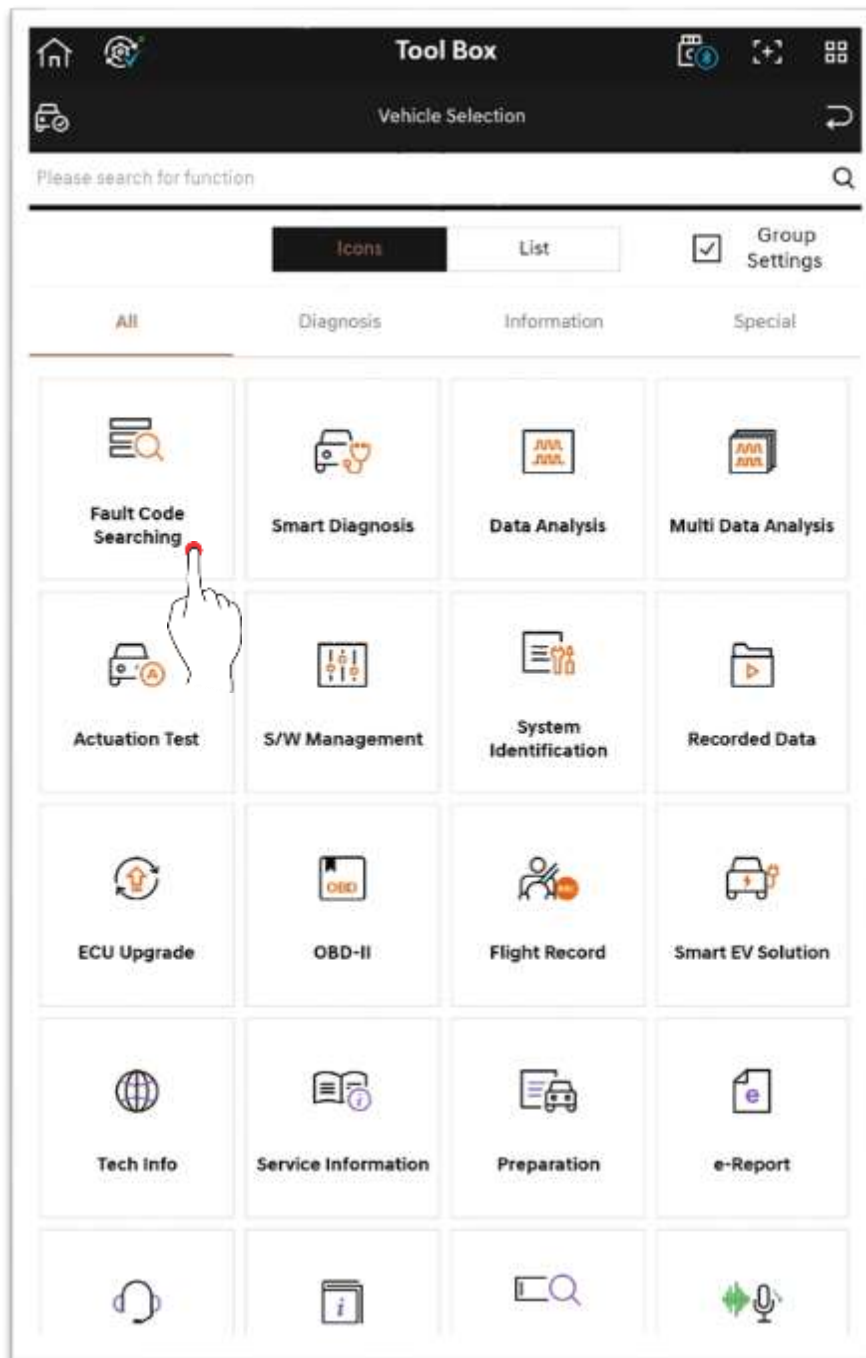

Basic Operation

The searched fault codes can be checked in formats of group or list by system.

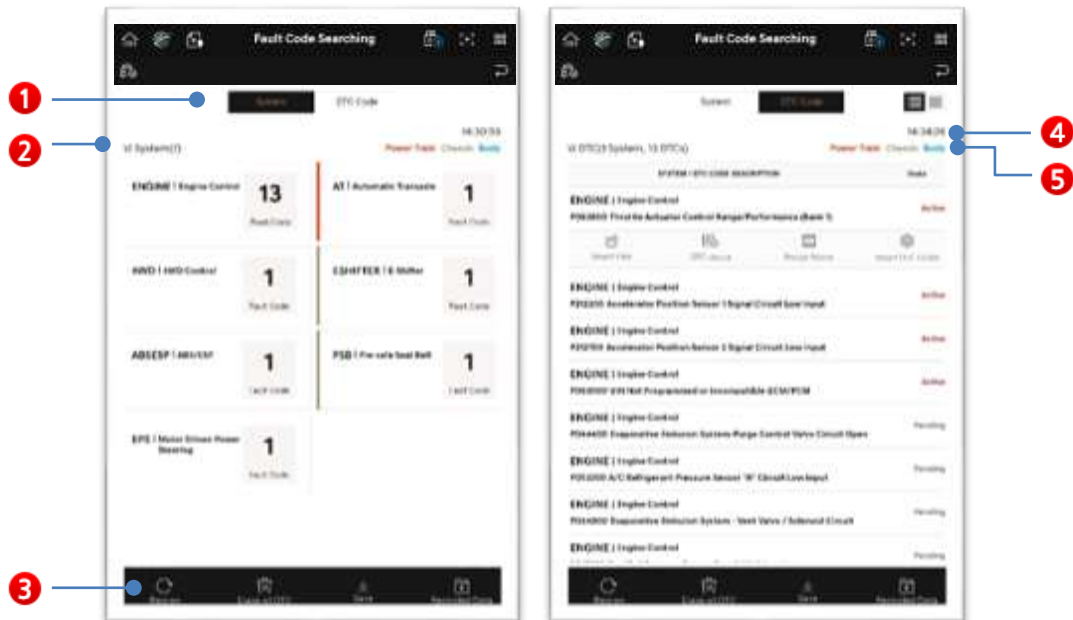


1	You can configure viewing of list by system/by fault code.
2	You can filter systems and fault codes, and view a desired item.
3	The searched fault code can be researched again or deleted.
4	It shows time consumed for searching the fault code.
5	It shows groups of systems and fault codes (powertrain, chassis, body) through color classification.


Fault Code Search – System

It shows number of searched fault codes by system.

If you select a system, a detailed screen on the searched fault code appears at the bottom.

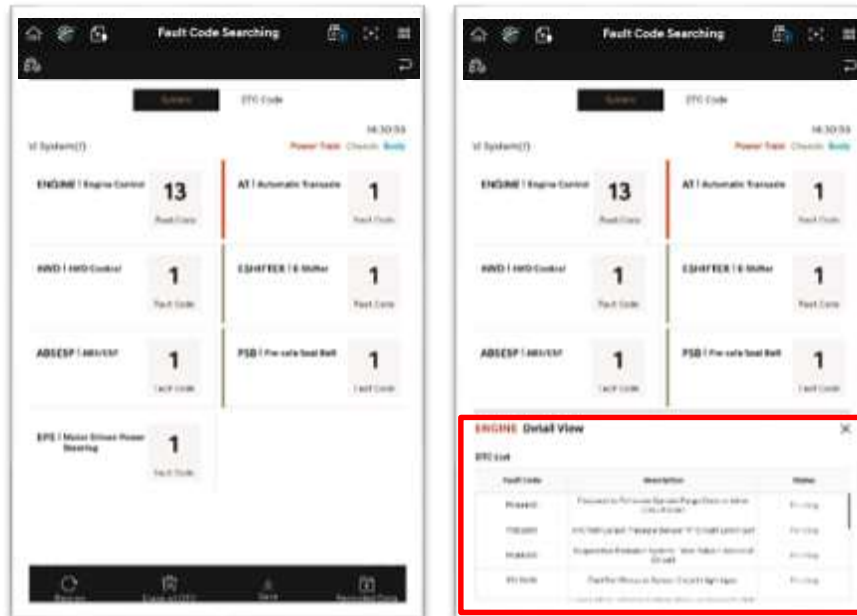



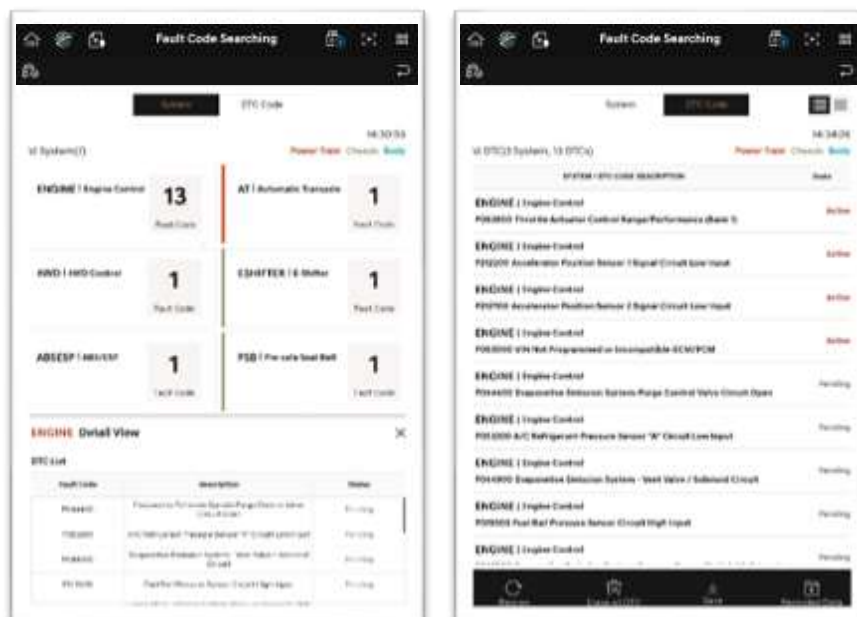



If you select a fault code in the detailed screen, it is switched to 'Fault Code' screen, which provides additional information.



Status Information

This is status information on the searched results of the fault codes.

Status Information by Card

 Scanning	Currently performing diagnosis communication with the vehicle.
 Ready	Preparing for diagnosis communication.
 Good	There are no search results for fault codes.
 Fault Code	It indicates number of searched fault codes.
 Communication Failed	Diagnosis communication has failed.
 Not Supported	This system is not supported.


Fault Code Status Information

Current	Fault codes that are currently recognized as faults in the vehicle.
History	Fault codes that are not currently recognized as faults, although the corresponding faults had occurred in the past.

Fault Code Search – Fault Code


It shows searched fault codes in list format.

Use   button to receive additional functions on fault codes.

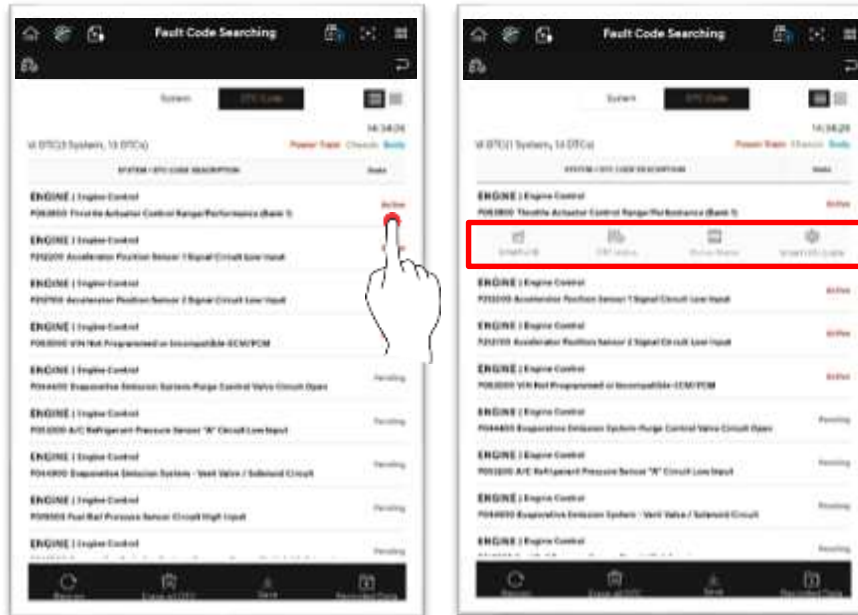


Smart Link

It provides shortcut links to S/W Management, Actuation Test, and Data Analysis that are related to selected fault codes. Select a desired item.

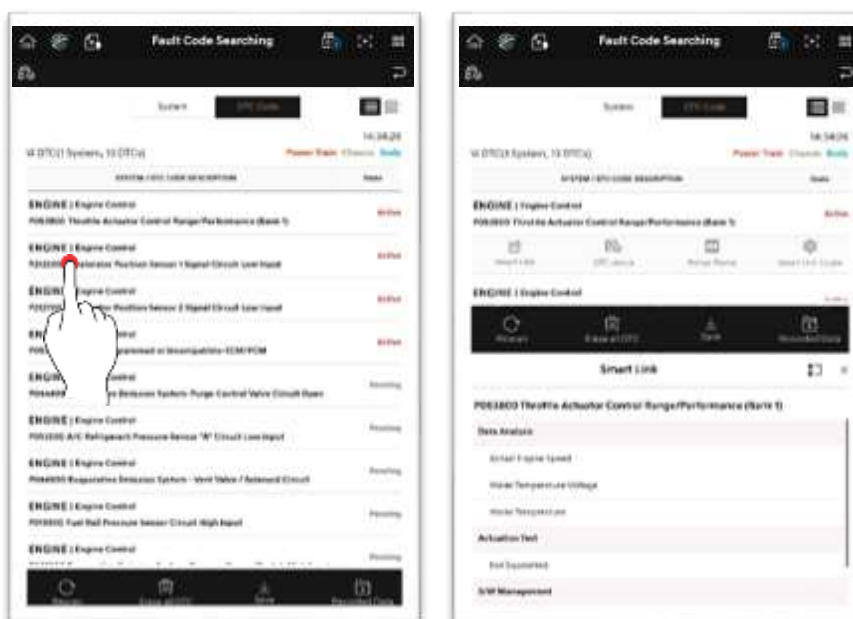


DTC Status

It provides information such as fault type, fault diagnosis completion status and warning light status, etc. related to selected fault codes.

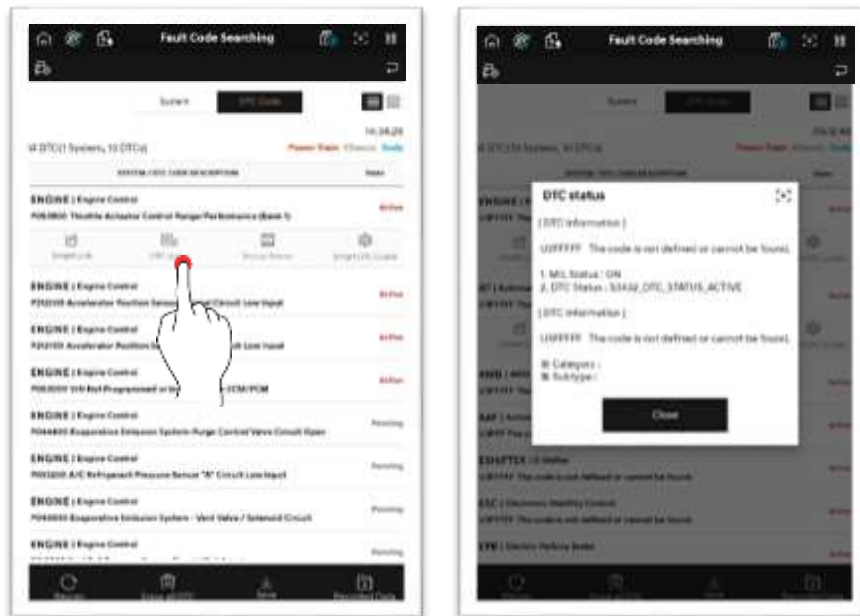


Freeze Frame

It indicates the sensor data, which is stored in the vehicle at the time when the selected fault code has occurred.

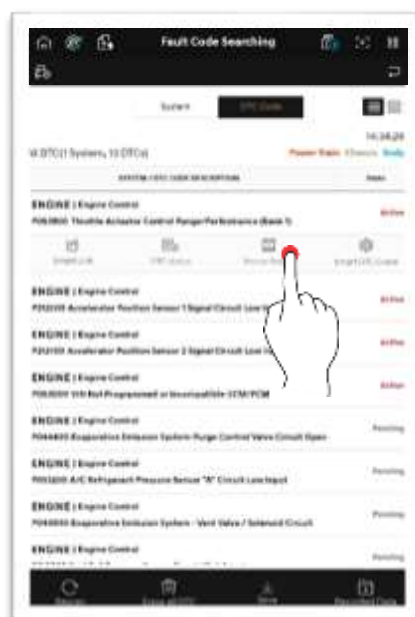

Smart DTC Guide

It provides various functions for inspecting the fault codes that occurred, such as expected causes, inspection procedure and relevant wiring/unit information, etc.

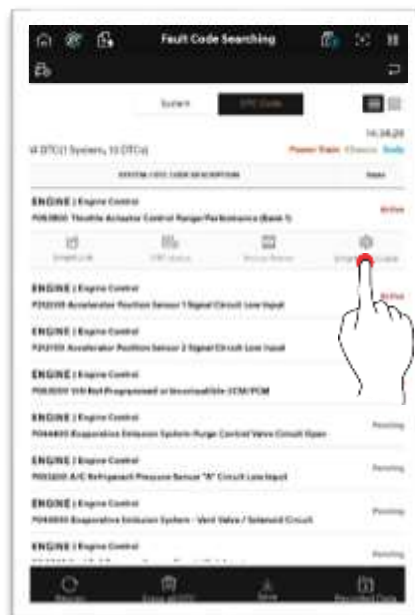

DTC Info

It summarizes and shows necessary information such as expected causes of the fault code occurrence and inspection procedure, etc.




Wiring/Unit Information

It summarizes and shows necessary information such as expected causes of the fault code occurrence and inspection procedure, etc.

Technical Information

It provides diagnosis guide for fault codes, electrical circuit diagram, and maintenance instruction.

* Please refer to GSW data.

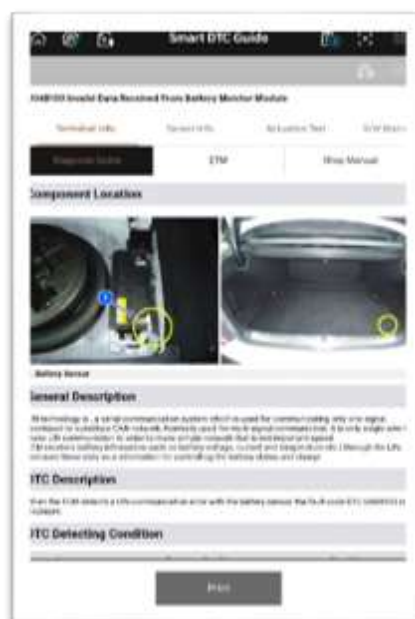

A reference value is provided to enable the user to check normal range of the sensor data.

A reference value is provided to enable the user to check normal range of the sensor data.

- 9 -





It may not be supported depending on the selected vehicle type, and the reference value is not an absolute number. Please utilize this value for reference purpose.


Sensor Data – Test Mode

Test Mode saves the sensor data values under certain conditions including IG ON, Idle, 2000RPM, etc., and inspection can be performed through data comparison.

Once the test conditions indicated on screen are satisfied, data are collected for a designated time.

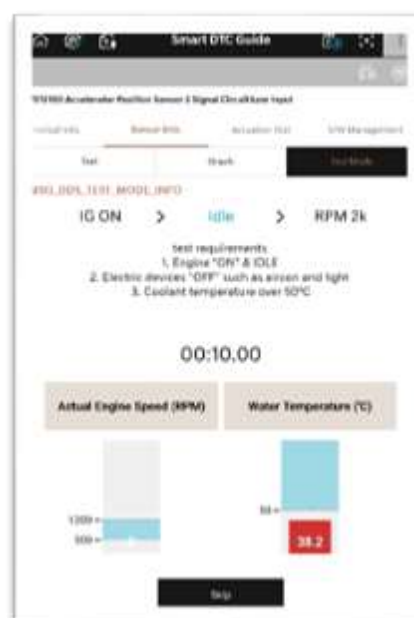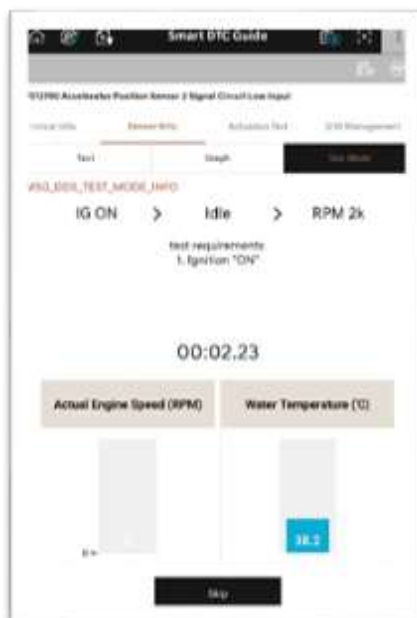

Sensor items that exceed/fall below the normal range reference value are indicated by change in color.

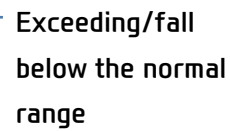

For detailed information on the forced self-driving, please refer to the relevant manual.



S/W Management

It indicates additional functions related to selected fault codes.

For detailed information on the additional functions, please refer to the relevant manual.

