

Basic Program Operation

This section provides description on basic HTWO-Smart program operation.

Introduction of Main Screen



Top Menu



1 Log-in

To use HTWO-Smart, you may need to log-in through GSW account. If you don't log-in, it may restrict some of the functions.

Ð	Log-out status
0	Log-in status * You can edit your profile. (Configration -> User Profile)

	Some features are not ave Please use o	ailable when logged off. after login.
Ô	User ID	
Û	Password	0
_ Sa	ve ID 🗹 Keep Logged	in 7 Days
1	Cancel	Login

- You can apply Save ID and Maintain Log-in Status (7 days) options.
- If you lose your account, you can search your account through GSW link.

2 Internet Update

You can update the latest information on HTWO-Smart through Internet Update function (Internet Update is supported in online environment).

R	Latest HTWO-Smart version status
(Downloading the date to be updated from the server
	Notification on a new update
(<u>)</u>	Failed to connect to the server

3 Module Connection Status Indication

This indicates wire/wireless connection status of tablet PC and communication module.

Module connection can be proceeded from Setting/Device Manager item.

	VCI II module is not connected.
ا ا	Searching VCI II module.
E S	VCI II \leftrightarrow Tablet is directly connected to wi-fi.
E ()€	VCI II \leftrightarrow Tablet is connected to a Bluetooth.
	VCI II \leftrightarrow Tablet is connected to a USB.
	GDS VCI \leftrightarrow Tablet is connected to a USB.



4 Capture Screen

You can capture the current screen of HTWO-Smart, and save it as an image file.

[+] Save it as an image file by touching the capture button.

The captured data is saved in the path of NvciData/Record/



Vehicle Type Selection

HTWO-Smart is configured to allow access to diagnosis and information on the selected vehicle type.



Bottom Menu



1 User's Guide

Displays the User's Guide list.

2 User Support

This allows connection to FAQ website provided by GIT. In addition, 'Frequently Asked Questions' menu can provide the user with guidance on the use of HTWO-Smart or software.

3 Configuration

Version Information	You can check HTWO-Smart's version.
Device Manager	You can check the connection status with the communication module, and proceed firmware update.
User Profile	You can configure the logged in user profile.
Auto VIN	You can switch Auto VIN function to ON/OFF.
Diagnosis No.	You can configure the setting for issuing the diagnosis no.
Server	You can check GSW and update server URL.
Unit	You can configure the data unit.
Language	You can configure language to be used.